

MINERAL-BASED COMPOSITE INSTALLATION GUIDE

Items you will need

- · Safety glasses
- Pencil or pen
- Tape measure
- Utility knife
- Jigsaw
- Carpenter square (speed square)
- Power screw gun or drill
- Soft mallet
- Portable power saw
- Fine-tooth saw blades (40-tooth minimum, sharp carbide-tipped wood or finish/trim blades)
- Large file or medium-grit sandpaper
- Chalk line
- Spacing tools
- Fastener-specific tools recommended by manufacturer

Each Deckorators Voyage and Vault board has a unique appearance and should be arranged according to the end user's preference. Prior to construction, check with your local regulatory agency's code requirements. For best results, follow all installation instructions, paying close attention to gapping, spacing and fastener requirements.

Joist spacing requirements

Installation style

	Standard	Picture frame	Diagonal (45°)
Residential	16"	16"	12"
Commercial	12"	12"	12"

Note: All dimensions are on-center.

Note: Joist spacing, stair stringer spacing and fastener requirements remain the same for all Mineral-Based Composite deck board widths (3.5", 5.5", 7.25", and 9.25").

Gapping requirements

Installation temperature

	Above 32° F (0° C)	Below 32° F (0° C)
Side-to-Side	1/8"	3/16"
End-to-End	1/16"	1/8"
End-to-Side	1/16"	1/8"
Abutting Solid Objects	1/8"	1/4"



End Tag

Note: Always follow best workmanship practices. Including, but not limited to, square cutting both board ends prior to installation.

Storage Storag

oist Spacing 16-in on-center for installat

16-in on-center for installation papendicular to the joint.
 12-in on-center for installation diagonal to the joint.
 Vait Deckorators.com for complete installation instructions, warranty and care and cleaning information behaviors, as indented all themself Common Problems, in the U.S. Blannity available at emerichiarysters can.
 See VIC en large for period for problems.

Rangement Gardez couvert

nstallation
Toutes les planches doivent être espacées

Consultez les directives d'installation complètes pour obtenir les détails.

 Éloignez tout le matériau de terrasse de 6,4 mm (1/4 po) de toute structure permanente ou de tout poteau.

Utiliser des attaches de terrasse en composite end à fletage inverse, résistantes à la corrosion de au

 Espacement aux solives de 41 cm (16 po) entre axes pour l'installation perpendiculaire aux solives.

pour l'installation diagonale aux solives.

Visitor Deckorators.com pour les intersections compais d'installation, garantie et l'entretien.

Delication et une ranque de convente déposée de Universit Consurer Produit, les aux filiais Une.

Le tente de la generate est dispositée à l'adresse wans deslocations com.

Almacenamiento Mantenga cubierto antes de ser instala:

nstalación

 Todas las tablas deben distribuirse de forma adecua para permitr la expansión y contracción. Reférese a

instrucciones para la instalación completa para detalla
 Distribuya todo el material para terrazas a 1/4

permanente o poste.

de 2-1/2 pulg., resistentes a la comosión, con re inversa y con recubrimiento.

 Espaciado de la viga 16 in (41 cm) en el centro pa instalación perpendicular a la viga.

 Espaciado de la viga 12 in (31 cm) en el centro par instalación diagonal a la viga.


Visite **Deckorators.com** para instrucciones completas de instalación, e información de la garantía y el cuida y limpiaza.


Declaration es una maria comental de Universal Consumer Producte, Inc. en los ES-102. La garantia está dispondide en sever declarators com. Clumide las etispartes EPC como comprobante ale compro.


*ŭŝä

C2016-2015 Universal Francis Products, Inc. All Agints reserve 5 Meadlewords Parking, Selma, AL 36701 (803) 332-5725

Product Sticker

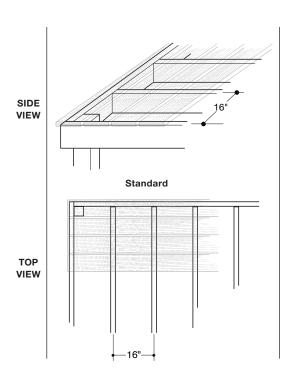

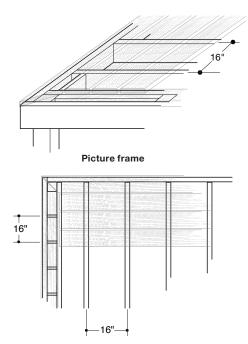

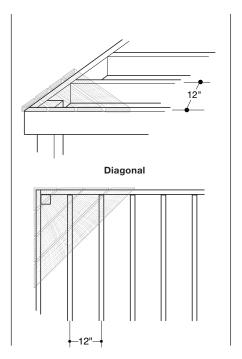

Cutting

- 10" 40T 80T circular blade (Carbide)
- 12" 40T 80T circular blade (Carbide)

For Mineral-Based Composite Decking:

- Use a sharp utility knife or jigsaw to finish cuts where a circular saw cannot fully complete cut. (Marking on the back side when needed.)
- Use a jigsaw to cut openings for protrusions. (8-12T per inch on the blade.)
- If necessary, use a large file or medium-grit sandpaper to clean cut edges.
- Use utility knife to cut any fibers or strands.

(In the rare event that a strand or fiber protrudes from the board, do not pull it.) If you are using a painted blade, you can remove the paint residue with medium grit sandpaper.

Fastener requirements

- Corrosion-resistant, galvanized or stainless steel fasteners
- Reverse-thread composite screw
- Minimum of 2-1/2" long screws
- 1-1/4" minimum penetration into joist
- Set power driver such that screws are slightly counter sunk.
 Do not overdrive.
- If using a hidden fastener system, use the manufacturer's recommended fastener and follow the manufacturer's instructions.

Installation

- Two fasteners per joist minimum.
- Ends of each board must fall on a joist.
- Double joist or use blocking where two board ends meet (fig.1).
- 1" maximum cantilever.
- Install entire deck at same temperature.
- Install the deck boards starting from the outside edge of the platform and work toward anchor wall so that ripped pieces abut the wall. Start installing from one end of the board and work toward the other end of the board.


OR: Start installing from the center of the board and work out toward the ends of the board. Do not install by fastening each end first and working toward the middle. To keep the interior boards from moving over time, we recommend pinning the boards at the center of their length using a #8, 2" stainless steel screw. This holds the deck board in place at the center of each board and allows the decking to expand/contract at the ends. Pre-drill in the groove of the deck board with an 1/8" drill bit (fig. 2a). Drive screw into the groove so it's flush with the bottom of the groove (fig. 2b). This will allow you to properly fit a Stowaway hidden fastener into the groove.


 Continue installing deck boards, adhering to the gapping requirements. Ensure consistent appearance by aligning each plank so that the cathedrals of the emboss pattern point in the same direction.

NOTE: Cutting all ends of boards prior to installation recommended.

Stair installation


- Stairs must be constructed according to national and local building codes. Generally, building codes require 3' minimum wide treads and 11" minimum tread depth.
- 9" maximum center-to-center spacing of stringers is required.

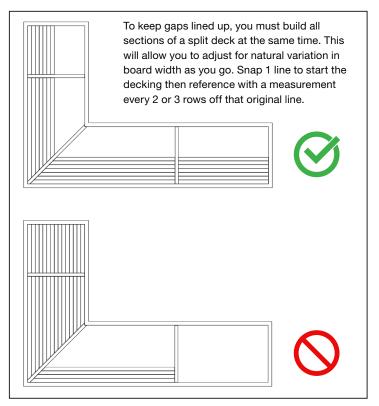

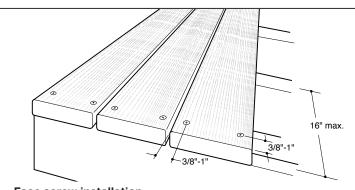

Face screw installation

- Use reverse-threaded composite deck screws.
- Screws must be 3/8" to 1" from side of board, 3/8" to 1" from end of board.
- · Use color-matched screws for best results.
- Use caution not to overdrive screw.

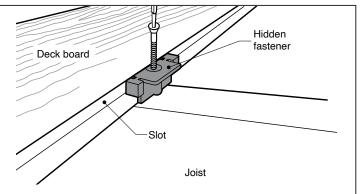

Hidden fastener installation

- Please refer to the compatible fastener information on Deckorators.com/FastenerInfo.
- Fastener slots may be routed into the side of the deck boards, as needed.
- Follow hidden fastener manufacturer's instructions.

- Stair treads should be fastened over a minimum of 5 stringers to meet code requirements.
- 1/2" maximum tread overhang over stringers.
- 1/8" minimum gap between stair-tread boards. Local building codes may require the gap to be increased to 1/4" 3/8" in order to maintain the minimum tread depth.

Color variation

Like most composites, Deckorators Decking will have color variations from piece to piece. This is due to naturally occurring variations in polymers. Purchasing all required decking material at one time is recommended, as manufacturing runs can produce slightly different colors. Do not install if color variation is not acceptable.

Mold and mildew growth

Mold and mildew can be a nuisance on any exterior building surface, regardless of the material. If the conditions are right, they will grow on wood, plastic, concrete, metal, and other surfaces. Mold formation is most prevalent in consistently wet, shaded areas. Spores from the natural environment are carried by the wind and commonly land on decks surfaces. It is important to note that the appearance of mold/mildew is a function of nature, not necessarily a deficiency with any of the material on which it grows.


Cleaning

Periodic washing with soap/mild detergent and water will help remove surface dirt. This will also help prevent the buildup of pollen, debris and spores that can cause and accelerate mold/mildew growth.

Caution: A pressure washer must not be used to "blast" mold/mildew or soils from a deck surface. The abrasive nature of the water stream can potentially cause damage by driving the spores deeper into the material, which may create a more challenging problem to remedy. A pressure washer with a fan-tipped nozzle must only be used to lightly wet or rinse wood or composite deck surfaces.

There are many deck wash and exterior cleaning products available at retail. Only use cleaners intended for your application. Instructions provided by the manufacturer must be followed. Some cleaning products and inhibitors may be more effective than others, depending on the environmental conditions your deck issubjected to. Additionally, it is

always a good idea to test the cleaner in a small, inconspicuous area prior to applying it to the entire deck (www.deckorators.com).

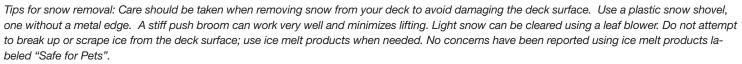



Mold inhibitors


As with deck washes, there are several mold-inhibitor products available from paint stores, hardware stores, online outlets, and home centers to help prevent long-term mold/mildew growth. For any product selected, be certain to read, understand, and follow all instructions provided by the manufacturer. Depending upon the environmental factors affecting your deck, some preventive cleaning products may be more effective than others. It may be necessary to try more than one product. For ongoing preventive maintenance, follow the manufacturer's recommendation.

Note: Deckorators is not suitable for structural use. It must not be used for primary load-bearing members such as posts, joists, beams, or stringers. The same commonsense precautions should be taken when handling Deckorators as with wood or other building materials. Dust masks and eye protection devices are recommended to avoid possible irritation from sawdust and chips. Gloves will help protect hands. Hands should be washed after construction work.

fig.1

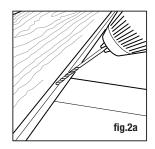

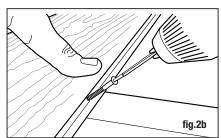

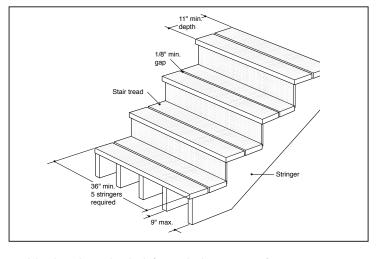

THE DIAGRAMS AND INSTRUCTIONS IN THIS BROCHURE ARE FOR ILLUSTRATION PURPOSES ONLY AND ARE NOT MEANT TO REPLACE A LICENSED PROFESSIONAL. ANY CONSTRUCTION OR USE OF THE PRODUCT MUST BE IN ACCORDANCE WITH ALL LOCAL ZONING AND/OR BUILDING CODES. THE CONSUMER ASSUMES ALL RISKS AND LIABILITY ASSOCIATED WITH THE CONSTRUCTION OR USE OF THIS PRODUCT. THE CONSUMER OR CONTRACTOR SHOULD TAKE ALL NECESSARY STEPS TO ENSURE THE SAFETY OF EVERYONE INVOLVED IN THE PROJECT, INCLUDING, BUT NOT LIMITED TO, WEARING THE APPROPRIATE SAFETY EQUIPMENT. UNIVERSAL FOREST PRODUCTS, INC., MAKES NO WARRANTY, EITHER EXPRESS OR IMPLIED, AND SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING CONSEQUENTIAL DAMAGES.